HORIZONTAL TRANSPORT OF PLATES: MATERIALS WHICH CANNOT BE DAMAGED

IPHNM



The IPHNM safety lifting clamps (NM stands for non marring) can be used in almost all sectors of industry where during lifting or transfer **no damage** to the material is permitted.

The jaws of the lifting clamp are made of a - synthetic material - with a very high coefficient of friction so that damageable plates can be held firmly, and transfered in either a vertical or horizontal position.

This also applies for materials with a very smooth surface, composites and coated plates or plates with a very hard (impenetrable) surface.



Model IPHNM

Model II IIIVM

Before using the clamp always read the instruction manual supplied with the clamp.

Mode l	Jaw	Dimensions in mm											
	No.	per pair in t.	Α	В	C	D	E	F	G	Н	J	K	per pair kg
0,5-IPHNM	3287	0,5	0-20	-	-	-	-	-	-	-	-	-	4,0
1 -IPHNM	3288	1,0	0-35	-	-	-	-	-	-	-	-	-	7,0
2 -IPHNM	3289	2,0	0-60	-	-	-	-	-	-	-	-	-	10,0



AVAILABLE MID 2006

imovative



Model IPHOZ

Horizontal safety lifting clamp IPHOZ is suitable for the lifting and transfer of sagging or bending plates in horizontal position.

Very light-weight construction.

The maximum top-angle is 60° when using IPHOZ clamps.

The IPHOZ lifting clamps can also be applied in combination with long chains or twoleg slings.

For correct use of the clamp, please consult fig. 2 & 3.

Higher WLL and different jaw-apertures upon request.



Model IPHOZ

Before using the clamp always read the instruction manual supplied with the clamp.

Model	0rder	WLL	Jaw			Di	mension	s in mm					Weight	Ε.
	No.	per pair in t.	A	В	С	D	E	F	G	Н	J	К	per pair kg	K T
0,75-IPHOZ	5401	0,75	0-30	94	16	_	16	70	118	81	12	12	6,0	
1,5 -IPHOZ	5402	1,5	0-45	133	16	-	22	125	192	100	16	12	11,0	В
3 -IPHOZ 4,5 -IPHOZ	5403 5404	3,0 4,5	0-45 0-45	137 138	20 25	-	26 30	125 126	200 220	120 120	20 20	10 10	16,0 17,0	A
6 -IPHOZ	5405	6,0	0-43	171	30		36	135	235	130	20	20	31,0	ct
9 -IPHOZ	5406	9,0	0-60	211	30	-	43	166	276	160	25	20	41,0	- *
12 -IPHOZ	5407	12,0	0-60	217	40	-	47	168	294	190	25	19	76,0	
15 -IPHOZ	5408	15,0	0-60	220	40	-	47	183	317	250	25	22	76,0	\leftarrow G
														<u></u>
3 6 1				parts for I lifting cla y complete ssegment c ssegment s		-	Order no. 1041 1234 1046		٨.	30°	0°	30°		15° 0° 15°



IPHG(U)Z



Model IPHGZ

Horizontal safety lifting clamp IPHGZ is suitable for the lifting and transfer of steel plates (including sagging plates). The IPHGZ lifting clamp is fitted with a locking device for both open and closed positions, which ensures complete safety. These clamps are also suitable for working in conjunction with an angle bench, guillotine, round roller, etc.

Available in two versions:

- 1. **IPHGZ:** fitted with a fixed hoisting eye. For correct use of the clamp, please consult fig. 2 and 3.
- 2. **IPHGUZ:** fitted with a fixed hoisting eye. For correct use of the clamp, please consult fig. 4 and 5.

Higher WLL and different jaw-apertures upon





Model IPHGUZ

Before using the clamp always read the instruction manual supplied with the clamp.

request.

Model	0rder	WLL	Jaw			Dir	nension	s in mm					Weight	
	No.	per pce in t.	Α	В	c	D	E	F	G	Н	J	К	per pce kg	
0,75-IPHGZ 1,5 -IPHGZ 3 -IPHGZ 4,5 -IPHGZ	5451 5452 5453 5454	0,75 1,5 3,0 4,5	0-25 0-25 0-40 0-40	82 110 120 120	148 200 227 284	206 250 305 381	50 50 70 70	99 118 148 181	98 90 120 155	-	12 20 25 30	22 28 32 40	4,0 7,3 12,3 25,0	F
1,5 -IPHGUZ	5455	1,5	0-25	110	232	287	70	139	90	-	20	16	9,0	B
2 7 9 6			.34 .4 .5							G	P			D C F
7 6 9 3		nao	\$pare safety 2 1. bd 2. ur 3. ca 4. la 5. sp 6. ca 4 7. hh 5 9. di 10. pi	parts for lifting d dy compl iversal ho mplete msegmer ch compl ring for la msegmer isting eye stance col vot compl	IPHG(U) lamps: ete oisting ey et comple ete tch comp it shaft co e shaft co lar comp ete	re ete oblete omplete mplete dete	0rder no. 1041 1235 1234 1233 1063 1046 1047 1337 0098		300000000000000000000000000000000000000	9%	} 50°	15000	,15°	30° 0° 45



HORIZONTAL TRANSPORT OF BEAMS: LIFTING CLAMPS/TACKLE-EYE CLAMP/LASHING CLAMP




Model IPTK

Multipurpose safety lifting clamp for steel beams. IPTK is suitable for application as a lifting clamp, tackle-eye clamp and as a lashing clamp. Load carrying capacity up to 15° from the center line of the clamp. The IPTK clamp is fitted with a screwed spindle for attachment of the clamp to the beam.

Optional feature: special offshore version, model IPTKO (including 3.1 B certificate).

Also available: multipurpose beam clamp model IPTKW without hoisting eye. All other parts and functions of the IPTKW clamp are identical to those of the IPTK beam clamp.

For correct use of the clamp, please consult fig. 2.

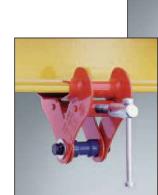



Model IPTK


Model IPTKW

Before using the clamp always read the instruction manual supplied with the clamp.

Mode l	0rder	WLL	Jaw	Dimensions in mm										
	No.	per pce in t.	Α	В	С	D	E	F	G	Н	J	K	per pce kg	
2-IPTK	0996	2,0	75-190	_	A+ 80	125	75	_	_	25	-	20	6,0	
3-IPTK	0997	3,0	75-190	_	A+ 80	125	75	_	-	25	-	20	6,5	
4-IPTK	0998	4,0	150-280	-	A+100	125	75	-	-	35	-	20	8,5	
5-IPTK	0994	5,0	120-350	-	A+195	125	75	-	-	43	-	20	11,0	
2-IPTKW	0966	2,0	75-1 90	-	A+ 80	125	-	28	-	25	-	-	4,0	
3-IPTKW	0967	3,0	75-1 90	-	A+ 80	125	-	28	-	25	-	-	4,5	
4-IPTKW	0968	4,0	150-280	-	A+100	125	-	33	-	35	-	-	6,3	
5-IPTKW	0969	5,0	120-350		A+195	125		33	_	43	_	_	8,8	

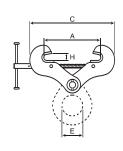


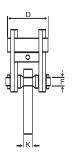

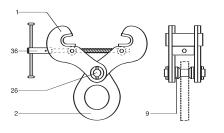

Spare parts for IPTK and IPTKW safety lifting clamps: 0rder

1. body complete
2. hoisting eye complete (IPTK)
9. distance collar (IPTKW)
26. hingeshaft complete
36. screwed spindle complete

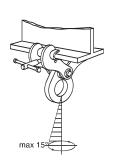

innovative

IPBHZ



Model IPBHZ

Safety lifting clamp IPBHZ is suitable for the lifting and transfer of steel beams and plates.

The IPBHZ lifting clamp is fitted with a locking device for both open and closed positions, which ensures complete safety. Also suitable for working in conjunction with an angle bench, guillotine, round roller, etc.

This clamp can grip beams on flanges or at head-end.

For correct use of the clamp, please consult fig. 2 & 3.

Higher WLL and different jaw-apertures upon request.



Model IPBHZ

Before using the clamp always read the instruction manual supplied with the clamp.

Model	0rder	WLL	Jaw			Di	mension	s in mm					Weight			
	No.	per pce in t.	Α	В	С	D	E	F	G	Н	J	К	per pce kg	1	E	
0,75-IPBHZ 1,5 -IPBHZ 3 -IPBHZ 4,5 -IPBHZ	5461 5462 5463 5464	0,75 1,5 3,0 4,5	0-25 0-25 0-40 0-40	40 60 80 112	148 200 227 284	220 255 325 413	50 50 70 70	130 153 188 251	69 73 112 116	-	33 35 38 80	22 28 32 40	3,0 6,0 10,5 25,0	D		_
															K C	
2 7 9 6		3	Spains afe 1. 2. 3. 3. 4. 4. 1. 5. 5. 6. 6. 7. 7. 1. 9. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3. 3.	e parts for ty lifting pody com- noisting e camsegme atch com- spring for camsegme noisting e distance c atch plate	or IPBHZ clamps: plete ye complent complete latch con ent shaft ye shaft o ollar com e complet	ete lete nplete complete complete plete te	Order no. 1041 1235 1234 1233 1063 1064 1047 1337 1353			30	000		90°		15° 0° 15° 15° 15° 15° 15° 15° 15° 15° 15° 15	

