

Threaded-Body Work Supports

max. operating pressure 500 bar



Application

Hydraulic work supports are used to provide a self-adjusting rest for the workpiece during the machining operations. They compensate the workpiece surface irregularities, also deflection and vibration under machining loads.

Hydraulic locking is made together with hydraulic clamping of the workpiece, or independently.

Three different sizes are available. Each of these can be combined with swing clamps as per data sheet B 1.881 or B 1.892 (see combination possibilities).

Installation

The threaded-body design of the elements allows direct installation in clamping fixtures, in horizontal or vertical mounting position, and thereby a space-saving arrangement. Hydraulic oil is fed through drilled channels in the fixture body.

Important note!

Work supports are not suitable to compensate side loads.


Operating conditions, tolerances and other data see data sheet A 0.100.

It is absolutely necessary to follow the instructions for venting of the spring area on data sheet A 0.110.

There are three variations of plunger actuation:


- 1. Spring advanced; plunger extended in off-position (see page 2).
- 2. Air pressure advanced; plunger retracted in off-position. The pneumatically-actuated plunger allows precise setting of the plunger contact force by means of a pressure reducing valve (see page 3).
- 3. Hydraulic pressure and spring advanced; plunger retracted in off-position It moves forward with a light spring force against the workpiece, when hydraulic pressure is applied (see page 4).

Installation example

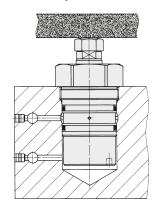


Combination possibilities

Threaded-body work support combined with flange-mounted swing clamps as per data sheet

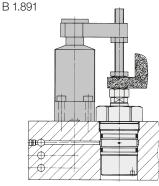

Threaded-body work support combined with threaded-body swing clamps as per data sheet B 1.892

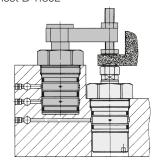



Important note


Support and clamping forces have to be adapted to each other, so that there will be sufficient force reserve available for the threaded-body work support to absorb the machining forces.

Thumb rule: Support force ≥ 2 x opposing force

The diagrams below show the graphs of the clamping and support forces for the 3 possible combinations.

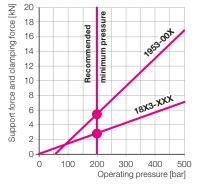

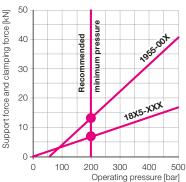

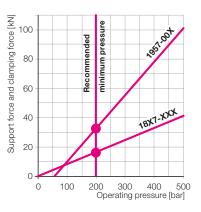


Example

Swing clamps 1895-506 clamps against threaded-body work support 1955-002. Operating pressure 200 bar.

Support force Clamping force

> 7 kN = possibleopposing force

Version: off-position extended, contact by spring force max. operating pressure 500 bar

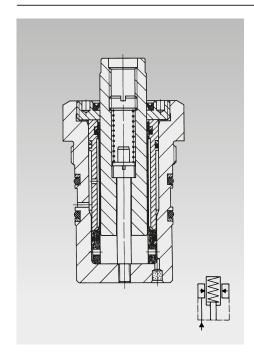

The support plunger is extended in off-position.

When the workpiece is inserted the plunger is pushed back. The contact force of the installed pressure spring depends on the stroke of the plunger. Afterwards the plunger is hydraulically locked.

The support plunger is provided with female thread to enable the use of threaded pieces for height adjustment.


The internal part of the work support is protected against dust and swarf by a sintered metal air filter. Liquids must not be sucked in by the filter. A corresponding protection cover has to be provided.

It is absolutely necessary to follow the instructions for venting of the spring area on data sheet A 0.110.

The support plunger must always be protected against penetration of contamination by a contact bolt (see accessory) or a plug.

Accessories


Contact bolts see data sheet G 3.800.

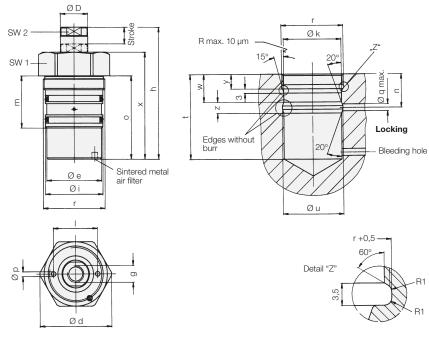



Plunger Ø D	[mm]	20	32	50
Stroke	[mm]	12	16	20
Support force at 200/500 bar	[kN]	5.6/16.8	14/42	34/102
Plunger contact force min./max.	[N]	15/25	30/60	50/100
Ød	[mm]	52	64	100
Øe	[mm]	41	53	83
g x depth of thread	[mm]	M 12 x 12	M 12 x 12	M 16 x 20
h	[mm]	95	119	174
Øif7	[mm]	42	55	85
Ø k H7	[mm]	42	55	85
	[mm]	_	_	86
m	[mm]	36	45	60
n	[mm]	24	29	41
0	[mm]	60	66	126
Ø p / deep	[mm]	_	_	8/9
Ø q max.	[mm]	5	5	6
r	[mm]	M 45 x 1.5	M 60 x 1.5	M 90 x 2
t	[mm]	61	67	127
Øu	[mm]	44	57	87
W	[mm]	20	24	36
X	[mm]	77	99	146
У	[mm]	10.5	12.5	20.5
Z	[mm]	8	10	10
SW 1	[mm]	46	55	95
SW 2	[mm]	17	27	41
Part no.		1953-000	1955-000	1957-000*
Spare seals - Seal kit for external seals		0131-525	0131-527	0131-529

^{*} with metallic wiper edge


Adm. support force F as function of the operating pressure p

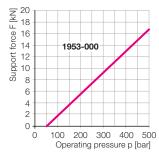

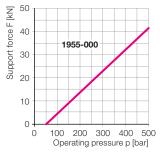

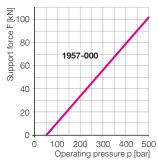

Version: extend and contact by air pressure max. operating pressure 500 bar

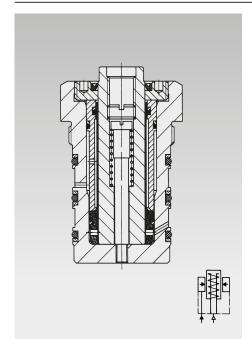

The support plunger is retracted in off-position.


The pneumatically-actuated plunger allows precise setting of the plunger contact force by means of a pressure reducing valve.

The support plunger is provided with female thread to enable the use of threaded pieces for height adjustment.

The support plunger must always be protected against penetration of contamination by a contact bolt (see accessory) or a plug.

Accessories


Contact bolts see data sheet G 3.800.

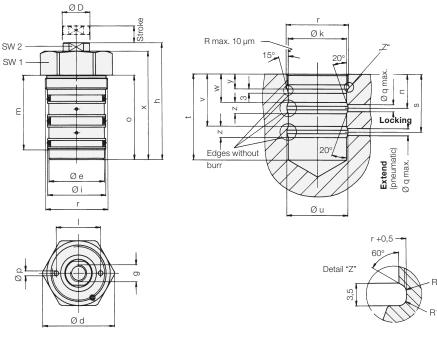



Plunger Ø D	[mm]	20	32	50
Stroke	[mm]	12	16	20
Support force at 200/500 bar	[kN]	5.6/16.8	14/42	34/102
Spring force min./max.	[N]	15/25	30/60	50/100
Plunger contact force at 1 bar air press	ure			
(deduct spring force, if necessary)	[N]	31	80	196
Ød	[mm]	52	64	100
Ø e	(mm)	41	53	83
g x depth of thread	[mm]	M 12 x 12	M 12 x 12	M 16 x 20
h	[mm]	83	103	154
Øif7	[mm]	42	55	85
Ø k H7	[mm]	42	55	85
1	[mm]	_	_	86
m	[mm]	53	64	85
n	[mm]	24	29	41
0	[mm]	60	66	126
Øp/deep	[mm]	_	_	8/9
Ø q max.	[mm]	5	5	6
r	[mm]	M 45 x 1.5	M 60 x 1.5	M 90 x 2
S	[mm]	41	46.5	64
t	[mm]	61	67	127
Øu	[mm]	44	57	87
V	[mm]	37	41.5	59
W	[mm]	20	24	36
X	[mm]	77	99	146
У	[mm]	10.5	12.5	20.5
Z	[mm]	8	10	10
SW 1	[mm]	46	55	95
SW 2	[mm]	17	27	41
Part no		1953-001	1955-001	1957-001*
Spare seals - Seal kit for external seals		0131-524	0131-526	0131-528

^{*} with metallic wiper edge


Adm. support force F as function of the operating pressure p

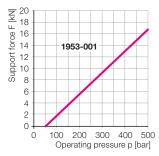

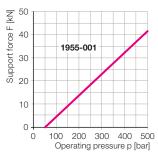

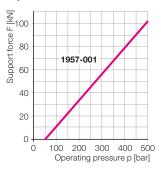

Version: extending hydraulically, contact by spring force max. operating pressure 500 bar

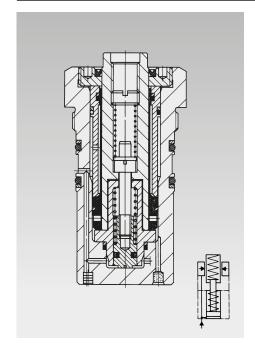

The support plunger is retracted in off-position.

When pressurised the support plunger moves against the inserted workpiece by means of light spring force. The contact force of the installed pressure spring depends on the stroke of the plunger. With increasing oil pressure, the plunger locks hydraulically.


After the system has been unclamped, the support plunger returns to off-position. The support plunger is provided with female thread to enable the use of threaded pieces for height adjustment. The internal part of the work support is protected against dust and swarf by a sintered metal air filter. Liquids must not be sucked in by the filter. A corresponding protection cover has to be provided.

It is absolutely necessary to follow the instructions for venting of the spring area on data sheet A 0.110

The support plunger must always be protected against penetration of contamination by a contact bolt (see accessory) or a plug.

Accessories


Contact bolts see data sheet G 3.800.

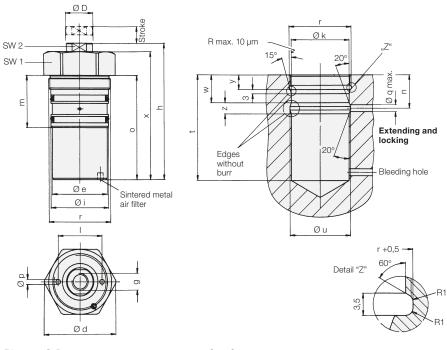



Plunger Ø D	[mm]	20	32	50
Stroke	[mm]	12	16	20
Support force at 200/500 bar	[kN]	5.6/16.8	14/42	34/102
Plunger contact force min./max.	[N]	15/25	30/60	50/100
Max. oil flow rate	[cm ³ /sec]	25	35	100
Required oil per stroke	[cm ³]	1.0	3.3	9.8
Ød	[mm]	52	64	100
Øe	[mm]	41	53	83
g x depth of thread	[mm]	M 12 x 12	M 12 x 12	M 16 x 20
h	[mm]	98	120	172
Øif7	[mm]	42	55	85
Ø k H7	[mm]	42	55	85
I	[mm]	_	_	86
m	[mm]	36	45	60
n	[mm]	24	29	41
0	[mm]	75	83	144
Ø p / deep	[mm]	_	_	8/9
Ø q max.	[mm]	5	5	6
r	[mm]	M 45 x 1.5	M 60 x 1.5	M 90 x 2
t	[mm]	76	84	145
Øu	[mm]	44	57	87
W	[mm]	20	24	36
X	[mm]	92	116	164
У	[mm]	10.5	12.5	20.5
Z	[mm]	8	10	10
SW 1	[mm]	46	55	95
SW 2	[mm]	17	27	41
Part no.		1953-002	1955-012	1957-002*
Spare seals - Seal kit for external	seals	0131-525	0131-527	0131-529

^{*} with metallic wiper edge

Adm. support force F as function of the operating pressure p

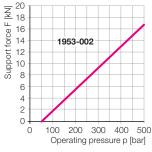

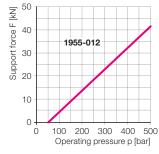

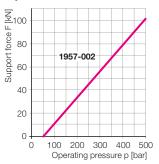

B 1.950 / 3-16 E