

Type: MCP/MCPS

Version 1.3 / 07.05.2014

Clamping Elements



Installation and Operating Instructions

1. Security Advice:

Caution:
Please read the complete documentation carefully before starting the set-up operation!



1.1. Depending on the type of application danger will be caused by:

- Contusion during installation caused by unsecured connecting construction
- Improper pneumatic connections
- Malfunction of pneumatic supply caused by pressure fluctuations or excessive heating
- Loose pneumatic connection
- Loose attachment screws
- removal of the spring cap
- Not turning off the operating instrument during installation or repair works at the clamping element
- Human malpractice
- Non-observance of the information and warning facilities during installation and the set-up operation

Installation instructions have to be followed and the necessary equipment and supplies have to be used during installation, modifications, maintenance and repair. Throughout every working process on the clamping elements the appropriate accident prevention regulations, VDE security and installation instructions have to be followed.

1.2. The application of the clamping elements – in accordance with regulations – implies that this technology will be utilized exclusively in consideration of the realm of possibilities defined by technical specification. All different ways of use exclude further liability of the Zimmer GmbH.

2. Model MCP (without spring storage), MCPS (inc. spring storage)

The clamping element is preset to the appropriate track gauge ex factory. The contact sections are pressed onto the non-attached areas of the track guide. Therefore, the process of clamping does not influence the precision and the economic lifetime of the track.

2.1. Operational Area:

The MK/MKS models are designed for static use. The additional pressurizing on the side of the piston rod, termed as PLUS-connection from now on, can increase the clamping power significantly (see 3.).


- max. surrounding temperature 70°C
- pneumatic operating pressure min. 5.5 bars, max. 8 bars
- check-up of all pneumatic connections in regular intervals

Caution:
Clamping processes during operation may cause damage of the clamping element as well as the linear guide.

3. MCP and MCPS-Plus-Version

The model MCPS can be operated as a plain spring storage element or as a pressure supported spring repository element (PLUS-connection). The clamping power can be increased significantly by the pressure supported spring storage.

Fig. 1 Diagram of Connection

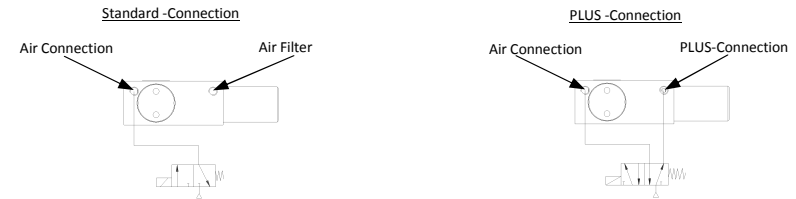

3.1. For a transportation lock, the spring energy storage is pre-stressed by a spacer between the contact sections.

Caution:
It is permitted to remove the transportation lock, only if the air connection is pneumatically pressurized to at least 5.5 bars according to instructions.
It is permitted to release pressure from the clamping element, only if an associated guide rail or a transportation lock exists!

3.2. The application of the PLUS-Version strictly requires the removal of the air filter. The connection has to be replaced with a pneumatic connection.

4. Construction note and Installation Instructions

4.1. General:

The clearance hole of the attachment screws must be designed like in table 1 and have to be a chamfer less than 0.1 mm. The maximum holding force is reached only by a rigid connection construction which must cover the complete connection surface of the clamping element. This must cover the complete connection surface of the clamp element and may not cross a mean roughness index of Ra3,2. For mounting the clamping elements, used screws have to comply with the category of solidity of min. 8.8. Attachment screws have to be tightened with the required moment (Tab.1).



Caution: The cap of the security clamping must not be removed, spring storage!


4.2. Installation / Uninstalling:

- Removal of the plastic blanking plug
- Attachment of M5 pneumatic connections, possibly attachment of PLUS-connection
- pressurize air connection to open the clamping element
- Set clamping element onto linear guide
- In case of using an adapter plate PLK, place this adapter plate between the clamping element and the connecting construction as a device of leveling
- Turn the screws loosely into the screw threads. Caution: please note the Screw length!
- Clamp model MCPS by depressurizing
- Clamp model MCP by pressurizing
- Tighten attachment screws variably and successive approximated with the required moment (Tab.1)
- For uninstalling perform in reverse order

**Type:
MCP/MCPS**

Version 1.3 / 07.05.2014

Clamping Elements

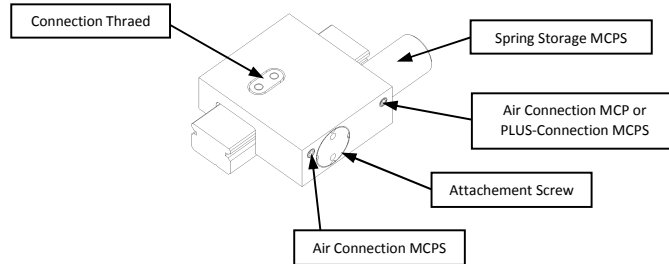

5. Operational Test

5.1. After the appropriate installation of the clamping element the operating readiness has to be tested

- The mobility has to be tested by manually moving the slide.
- The process of clamping has to be tested by manually moving the connecting construction.
- The appropriate mounting of the fixed and flexible pneumatic pipe installation has to be tested by visual control.
- All pneumatic connections at the pressurized element have to be visually checked for leakage.
- All attachment screws have to be checked for their required moment (Tab.1).

5.2. Readjusting

- After appropriate installation, readjusting will not be necessary because the contact sections are preset ex factory.**
- Relieve clamping element
- Tighten adjustment screws clockwise until the contact section suits. (supplies, adapter)
- Caution: Both adjustment screws have to be screwed in identically and subsequently have to be screwed back to an angle of 15°.
- Start operational test.

For further information, please contact our technical service: 0049/7844/9138-0

6. Technical Data

Table 1

Size	Connect- ion	estimated Consumption per Cycle at 6bar [cm³]	estimated PLUS- Consumption per Cycle at 6bar [cm³]	Attachment Screw Category of Solidity 8.8	clearance hole of the connecting construction [mm]	tightening Torque [Nm]
MCP / MCPS 05	-	-	-	-	-	-
MCP / MCPS 07	-	-	-	-	-	-
MCP / MCPS 09	M 3	0,08	0,16	M 2,5	Ø 2,6+0.1	0,55
MCP / MCPS 12	M 3	0,08	0,16	M 2,5	Ø 2,6+0.1	0,55
MCP / MCPS 15	M 3	0,08	0,16	M 2,5	Ø 2,6+0.1	0,55
MCP / MCPS 20	M 3	0,18	0,34	M 4	Ø 4.1+0.1	2,1
MCP / MCPS 25	M 3	0,18	0,34	M 4	Ø 4.1+0.1	2,1

Data concerning air consumption is approximate.

Technical modifications reserved.

Manufacturer's Statement

in terms of the EC – Machinery Directive 98/37/EG, Appendix II B

Herewith we certify that the type of construction

Product's Name: Clamping Elements

Part Number: MCP/MCPS

is – in its delivered version - intended to be installed into a machine or for the assembly with other machines in order to create a new machine, and that its start-up is prohibited until it is proved that the machine, in which the above-named machine shall be integrated, corresponds to the EC – Machinery Directive 98/37/EG.

.....
Legally binding signature (business management)